HOW TO TREAT A RENTAL CAR WITH NUVINAIR REFRESH OR RESTORE



STEPS 1-3




PREPARE THE VEHICLE

Ensure that the vehicle has been properly detailed prior to performing a treatment. For best results, use ReNuSurface[®]. Gather the NuVinAir Cyclone, Timer with Blue Cable, a NuVinAir ReStore Treatment, Green USB Cable, a NuVinAir Cup Keeper, a NuVinAir Treatment in Progress Hat and a Vehicle Door Magnet.




CHECKLIST

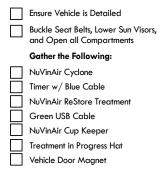



Remove the Motor Base from the Cyclone. Fill the Cyclone to the Fill Line with room temperature water and place the top on the Cyclone. Place the NuVinAir Treatment in Progress Hat on the roof of the vehicle. Unlock and enter the vehicle, turn the vehicle on, and roll up all windows. Set heat or A/C to between 72 and 77 degrees depending on the time of the year. Also, set the A/C to recirculating air on the highest airflow setting with A/C mode set to flow through the instrument panel vents only. Open all airflow vents except driver's side. Open all compartments including Glove Box, Center Console, and any compartments in the rear of the vehicle.

CHECKLIST

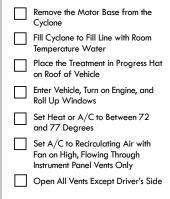




ATTACH THE TIMER

Make sure the Motor Base is attached to the Cyclone. Plug the Micro USB end of the green cable into the Motor Base. Plug the USB end of the green cable into the AC Adapter. Ensure the Cyclone Propeller is spinning. If it's not, press the power button once to turn it on. With the propeller spinning, pull the USB end of the green cable out of the AC Adapter making sure to leave the Micro USB end connected to the Cyclone Motor Base. Plug the USB end of the Green Cable into the timer.



CHECKLIST

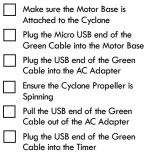



Scan the code with your mobile device or for detailed instructions, please visit: NuVinAir.com/treatments



HOW TO TREAT A RENTAL CAR WITH NUVINAIR REFRESH OR RESTORE



STEPS 4-6



PERFORM A TREATMENT

Remove the top of the Cyclone. Open a ReFresh or ReStore Treatment and drop it into the Cyclone. Place the top back onto the Cyclone. Plug the USB end of the Blue Cable into the AC Adapter. A blue light will begin flashing on the timer. To perform a ReFresh treatment, no extra steps are needed, exit the vehicle. To perform a ReStore treatment, press and hold the button. Release the button when the blue light changes to a flashing green light, indicating that it is set for ReStore. Exit the vehicle and close the doors. The timer will countdown from 3.5 minutes before starting the treatment.



COMPLETE THE PROCESS

After the countdown, the treatment will start and the blue or green flashing light will turn **RED** and continue to flash for the duration of the treatment. When the treatment is complete, the red flashing light will change to a **solid BLUE for ReFresh** or **solid GREEN for ReStore**. Open all doors starting with driver front, driver rear, passenger rear, passenger front. Enter the vehicle and roll all of the windows down. Turn off the recirculating air, but keep the airflow on high. Open the driver's side vent. Unplug and remove the Cyclone, timer, and cables. Exit the vehicle and allow it to air out for a minimum of 5 minutes.



CHECKLIST

Remove Cyclone Top
Drop Treatment into Cyclone and Place Top Back Onto Cyclone
Plug the USB End of Blue USB Cable into the AC Adapter
Set Timer for ReFresh or ReStore
Exit the Vehicle
Close Doors
The Timer will Begin a 3.5 Minute




- After the Countdown, the Light on the Timer will turn **RED** and Flash for the Duration of the Treatment
- Treatment is Complete when the flashing red light changes to solid BLUE for ReFresh or solid GREEN for ReStore
- Open All Doors and Enter Vehicle
- Roll Down All Windows Turn Off Recirculating Air
- Open Driver's Side Vent
- Unplug and Remove the Cyclone, Timer, and Cables
- Exit the Vehicle and Allow to Air Out for a Min. of 5 Minutes

6

Remove the NuVinAir Treatment in Progress Hat and Door Magnet from the vehicle. Detach the Cyclone motor base and set aside. Dispose of the remaining liquid and wash the Cyclone with warm, soapy water. Set upside-down and allow it to dry before next use.



CHECKLIST

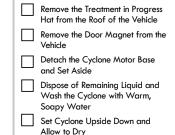

Scan the code with your mobile device or for detailed instructions, please visit: NuVinAir.com/treatments

